


Self-Contained Safety Shower Install Steps

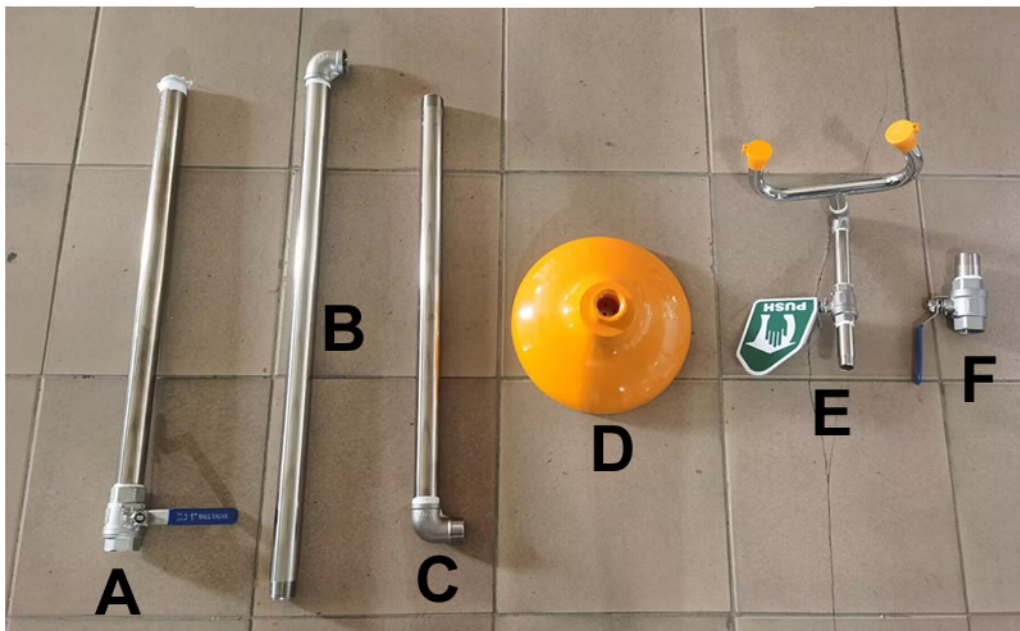

A: Shower Ball Valve Pipe	1pcs
B: Shower Connection Pipe	1pcs
C: Shower Head Pipe	1pcs
D: Shower Head	1pcs
E: Eyewash Sprayer Set	1pcs
F: Drainer Ball Valve	1pcs

1. Connect the A(Shower Ball Valve Pipe), wrap 6-8 rounds teflon tape



2. Connect the B(Connection Pipe) with A



3. Connect the C(Shower Head Pipe) with B



4. Connect the D(Shower Head) with C



5. Connect the E(Eyewash Sprayer Set)



6. Connect the F(Drainer Ball Valve)



Take Note:
For all jointing, please wrap more rounds teflon tape!